


Direct Color Systems®

Properly Cancelling a Print Job

Should it be necessary to suddenly stop a job, use the following steps to cancel the job in a clean fashion, such that you can get started with the next job promptly (under no circumstance should you disconnect the USB cord from the printer or computer to abort a job):

1. In the RIP, right-click the job and choose **Abort** (Ensure the Auto-Return is OFF)

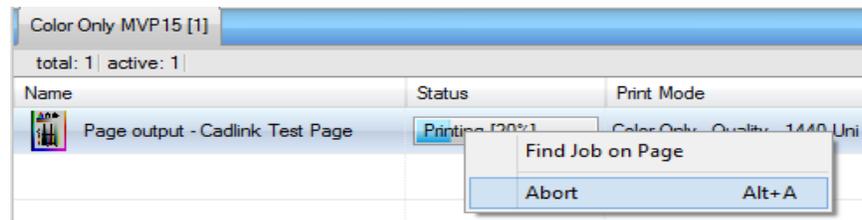

2. Windows will open a **Port Locked** dialog. **Do not close this dialog.**



3. The media table will eject and the carriage will move back and forth on the x-axis
4. Wait for a solid green light on the Printer Control panel (There is a pause before the carriage performs it's last pass on the x-axis so be sure it is truly done aborting)
5. Return to the **Port Locked** dialog and click **Unlock** to continue.
6. Right-Click the job and select **Clear Error**

At this point, the printer should be ready to process new jobs, and buffer data from the cancelled job will have been cleared.

